



www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

Copyright © 2012
Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD

Swan
designed for life



Food Processor & Blender

For model: SP13040N

v2.0



Important Safeguards

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
2. Incorrect operation and improper use can damage the appliance and cause injury to the user.
3. **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**
4. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
5. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
6. Never immerse the unit in water or any other liquid for cleaning purposes.
7. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Unplug the unit when not in use or before cleaning
8. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
9. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
10. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
11. Do not use the appliance on a gas or electric cooking top or over or

Swan
designed for life

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

Important Safeguards


- near an open flame.
12. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
 13. This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
 14. Do not carry the appliance by the power cord.
 15. Do not leave the appliance unattended during use.
 16. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
 17. The manufacture does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
 18. In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
 19. Your appliance must never be switched on through an external timer or any kind of separate remote control system
 20. Do not touch the cutting blades and do not insert any kind of object(knives, forks, spoons etc.) while the product is operating. A spatula may be used only when the product is not in operation, avoiding the risk of serious injury.

Specification
Model No. SP13040N
220-240V~50Hz
700W

Swan
designed for life

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

Parts & Assembly

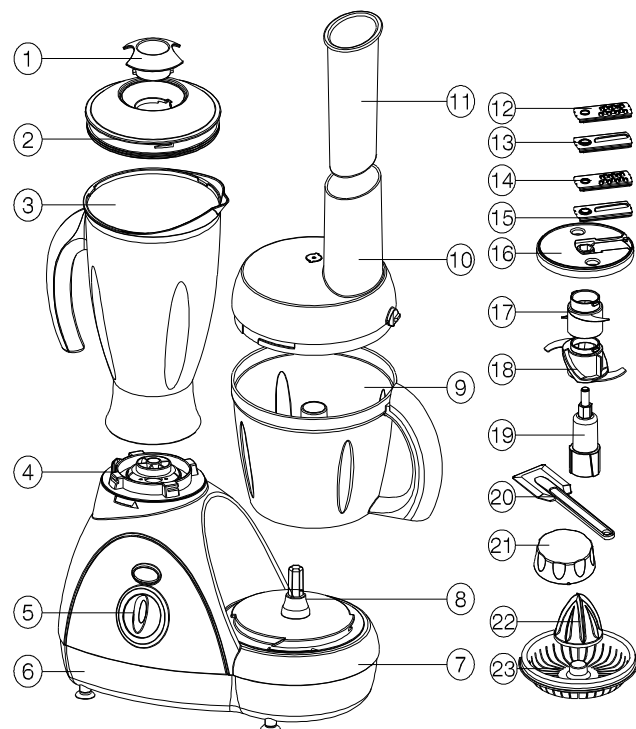

1. Measuring Cup
2. Blender Jug cover
3. Blender Jug
4. Switch Connector
5. Variable Speed Switch
6. Motor Base
7. Base
8. Turn Axis
9. Mixing Bowl
10. Bowl Cover
11. Food pusher/measuring cup
12. Shredding blade

13. Slicing Blade
14. Fine Shredding Blade
15. Fine Slicing Blade
16. Blade Support
17. Whisking Blade
18. Chopping Cover
19. Blade Support
20. Spatula
21. Protective Cover
22. Juice Drill
23. Filtration Plate

Swan
designed for life

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

Parts & Assembly cont.



Swan
designed for life

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK



First Time Use

Read this instruction book to familiarise yourself with all the parts of your new food processor/blender. Try assembling/dis-assembling the various parts. It's a lot easier when the product is empty!

Clean all the parts and accessories in contact with food before using the appliance for the first time (see paragraph "Cleaning").

PLEASE NOTE: THERE ARE VARIOUS INTERLOCK SWITCHES FITTED TO THE PRODUCT THAT DETECT CORRECT ASSEMBLY. THE PRODUCT WILL NOT FUNCTION UNLESS IT IS PROPERLY ASSEMBLED

Warnings

Never exceed the maximum quantities and never pour liquids hotter than 75°C into the bowl and/or blender

- Never leave the appliance unattended while it is on.
- Never make the appliance work for more than a few seconds while it is empty (brief testing for correct assembly is OK)
- Never touch the moving parts.
- Never put your fingers or utensils inside the lid opening.
- Never press down the ingredients into the lid opening with your hands.
- Do not use the appliance to work hard ingredients (e.g. frozen meat, crusts of cheese...), rubbery (e.g. candied peel...), and uneatable parts of ingredients (e.g. bones) . This appliance is not suitable for crushing ice.
- Do not remove the lid and never replace accessories without switching off the appliance and if the accessory being used has not stopped working.
- Do not remove the ingredients from the bowl before removing the blade

Swan
designed for life

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

How to Use

MIXING BOWL

I. Chopping Function

-Put the plastic bowl on power unit and turn the handle in clock-wise direction, as shown in Diagram 2.

-Put the blade support on the axis in the middle of the bowl, and press it to the bottom. Then fix the chopping blade to blade support, as shown in Diagram 4&5

Warning: The blade is sharp. Please only hold the plastic part while using.

- Put the food (e.g. Meat) into the bowl, as shown in Diagram 6. Cut larger food items into smaller pieces. (Approx 2 cm × 2 cm × 2 cm).
- Put the cover on the bowl, and turn it until hearing the "click" sound, as shown in Diagram 7&8
- Connect the plug to the electric socket, rotate the button switch to choose the suitable speed, there are 4 different speeds in all, as shown in diagram 8.
- TURBO is a contact switch, by which the appliance can achieve maximum speed momentarily. When the chopping is finished, rotate the button switch to "0". After the blade stops, pour out the food.

II. Whisking Function

Mixing function has almost the same operating steps as chopping function. Only change the chopping blade to shredding blade. It is used for mixing and whisking of food, e.g. egg.

III. Slicing & Shredding Function

- Put the slicing/shredding knife into the blade cover, as shown in Diagram 9. Slicing knife makes the food into slices. Shredding knife makes the food into shreds.

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

Swan
designed for life



How to Use

- Put the bowl on the power unit first, and then turn the bowl in clock-wise direction, until hearing the “click” sound. Then put the knife support on the axis in the middle of the bowl, as shown in Diagram 10.

IV. Juicing Function

1 Put the bowl on the power unit first, and then turn the bowl in clock wise direction, until hearing “click” sound. Then fix the filtration plate and juice drill to the bowl, as shown in Diagram 13&14.

2 Fix the plug to the electric socket, turn the switch to 1 or 2.

3 Cut the orange into halves, the push down the cut orange slowly, opposite to the juice drill, as shown in Diagram15.

4 Pour out the juice, and mix with seasoning as you like.

BLENDER JUG

-Put food/liquid into the Blender jug. Fix the Blender jug on the power unit first and then turn it in clock-wise direction, until it “clicks” into place.

-Please make sure that the Blender jug and lid are properly assembled

-Connect the power plug of the machine and switch on the food processor. Turn the knob to the required level. You can press the TURBO button to briefly increase to max speed if required.

Cleaning

COMPLETELY CLEAN AND DRY ALL PARTS AFTER EVERY USE.
PLEASE TAKE EXTREME CARE WHEN HANDLING THE BLADES

Always turn the appliance “OFF” and remove the plug from the electrical outlet before cleaning it. Wait for appliance to cool down if necessary.

Wipe the outside with a damp cloth and dry with another cloth or paper towel. Do not use abrasive cleaners.

Wash the accessories and blades in hot soapy water.

Rinse and dry.

Do not put clear plastic accessories in the dishwasher as the high temperatures can dull the finish.

BS Plug Wiring

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO THE EARTH TERMINAL

WEEE Directive

Disposal of Unit



Disposal instructions for Swan items in accordance with the WEEE directive. Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recyclemore.co.uk, or www.recyclenow.co.uk for access to information about the recycling of electrical items. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

Declaration of EC Conformity

We Swan Products Ltd Declare that this product conforms to all the following product legislation. In accordance with the following directive(s):

2004/108/EEC. The Electromagnetic Compatibility Directive
2006/95/EC. The LVD directive (Low Voltage Directive)
2002/95/EC. The RoHS. Directive. (Restriction of Hazardous substances Directive)
80/590/EEC and 89/109/EEC Food Contact

Kev Stewart
Product Manager



Swan
designed for life

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

Two Year Warranty



This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

The product must be returned to the retailer with proof of purchase.

The product must be installed and used in accordance with the instructions contained in this instruction guide. It must be used only for domestic purposes. It does not cover wear and tear, damage, misuse or consumable parts. Swan Products Ltd has limited liability for incidental or consequential loss or damage. This guarantee is valid in the UK and Eire Only.

Swan Brand Heritage

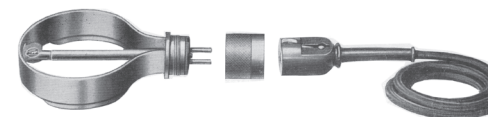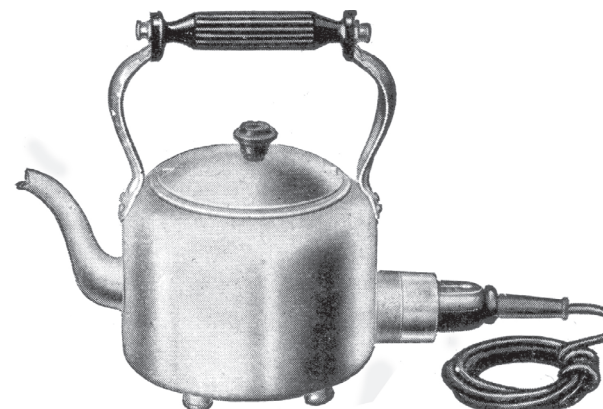

Did you know...

In 1933 Swan were the first to develop an electric heating element that could be immersed in water. This led to the Swan kettle range that could boil up to six pints of water in just over nine minutes - pretty hot for the time! These days it takes about two minutes for a Swan kettle to boil.